

Combine Yield Calibration with Active Yield and Gen 4 Display



TRIGREEN
E Q U I P M E N T

www.trigreen.com

1 Recommended to update receiver and display software to current version as well as update controller software.

2 MUST calibrate the receiver TCM for ActiveYield to work correctly.


A.




B.



C.

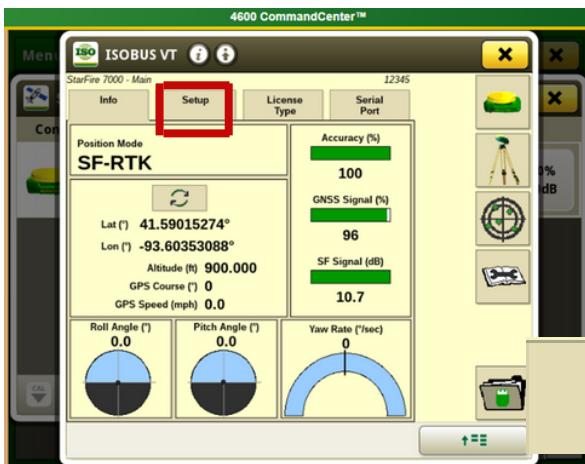

D.

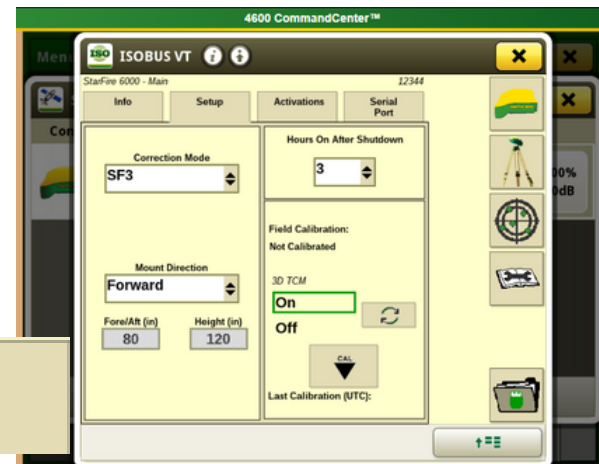


3 Perform Mass Flow Sensor Vibration Calibration with header attached, and the combine grain tank empty.



A. This vibration calibration should be performed when:

- i. AYM Controller Software is updated
- ii. Recommended each time the header is removed/installed - especially after road transporting.

iii.

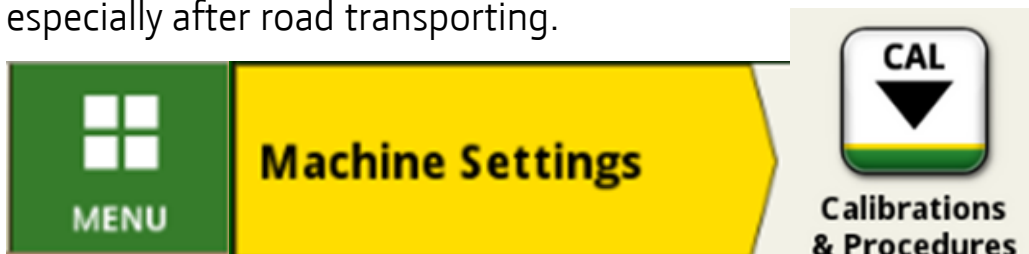

B.

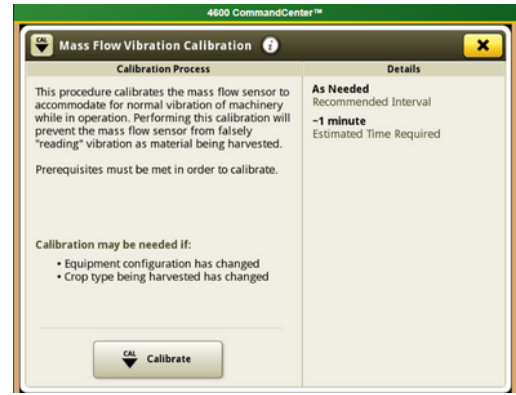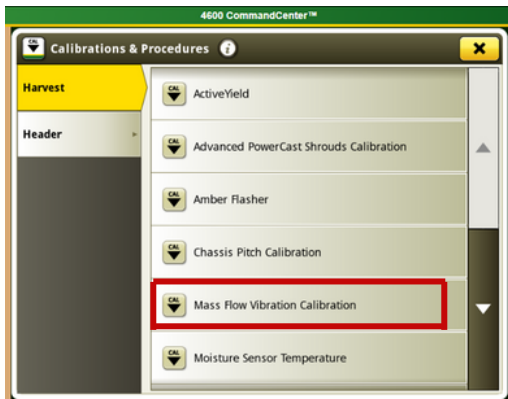



4

Calibrate the Moisture Sensor Temperature

A.



B.

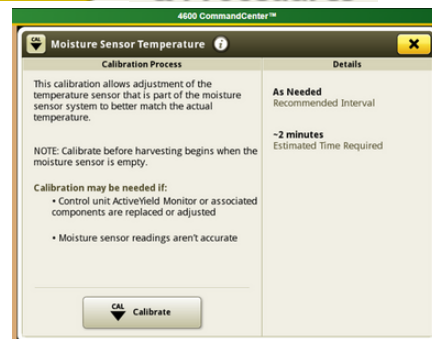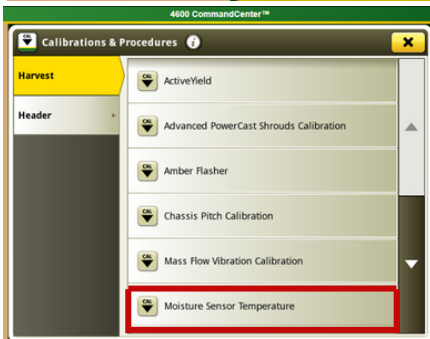


5

Go to Calibrations and Procedures and select ActiveYield. Press Master on.

i. Need to have 15 loads stored prior to checking accuracy. The system improves accuracy with more loads.


ii.

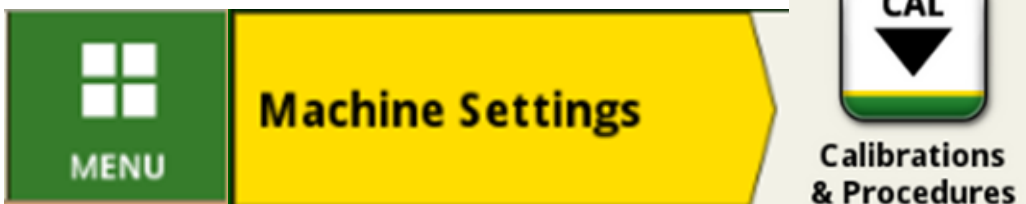

iii.



iv.

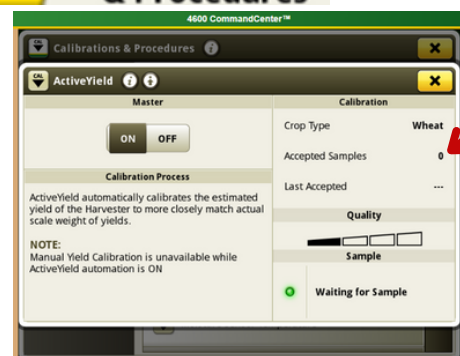

Number of accepted loads